

ENTER CONFIG MENU

- 1 - Engine and ignition OFF
- 2 - Hold both buttons until **[CONF]** appears

EXIT CONFIG MENU & SAVE

To exit and save settings, HOLD the right button until the display goes blank

NAVIGATING THE MENU

Ⓡ Display settings

[d.on] Ⓛ > **[d.On.A]** Ⓛ > **[d.On.P]** Ⓛ > **[d.OFF]**

Ⓡ Unit settings

[En.y] Ⓛ > **[En.b]** Ⓛ > **[En.c]** Ⓛ > **[En.n]**

Ⓡ Pressure resolution

[Pr0.1] Ⓛ > **[Pr0.5]** Ⓛ > **[Pr 0]**

Ⓡ Vaccum Bargraph

[U.b9.y] Ⓛ > **[U.b9.n]**

Ⓡ Shift Light

[SL.30] Ⓛ > ... → **[SL.90]**

Ⓡ Boost settings

[bSt.d] Ⓛ > **[bSt.A]** Ⓛ > **[bSt.n]** Ⓛ > **[bSt.C]** Ⓛ > **[bSt.F]** Ⓛ > **[bSt.P]** Ⓛ > **[bSt.t]**

Ⓡ AUX Analog Input 1 *(See analog inputs for details)*

[A1.n]

Ⓡ AUX Analog Input 2 *(See analog inputs for details)*

[A2.n]

Ⓡ Car settings

[CAR.0] Ⓛ > **[CAR.1]** Ⓛ > **[CAR.3]** Ⓛ > **[AnL9]** Ⓛ > **[CAR.4]** Ⓛ > ... → **[CAR.8]**

Ⓡ Advanced Protocol Settings *(DO NOT CHANGE unless instructed to)*

[SH .A] Ⓛ > **[SH .P]** Ⓛ > **[SH .n]** Ⓛ > **[SH .y]**

Ⓡ Clear Codes

[CLr.C] (Hold left button until **[CLr.d]** appears to clear codes)

Ⓡ Calibrate Analog Sensor

[CAL.b] (To Calibrate Sensor, Tap left button then wait for **[tAP.1]** then TAP left button again)

*(Only appears when set to **[bSt.A]**)*

